

# XH-B5

## Pneumatic Heat Press



# INSTRUCTIONS TO USE THE CONTROL PANEL

## 01. IT940N control panel view.



## 02. P-1: Set temperature.

Press "set" and  $\uparrow\downarrow$  arrows to select the desired temperature.



## 03. P-2: Set press time.

Once you have set the temperature, press "set" and select the press time with  $\uparrow\downarrow$  arrows. After selecting the desired time, press "set".



## 04. P-3: Set between °C or °F.

Press  $\uparrow\downarrow$  to choose between degrees Celsius or Fahrenheit.



## 05. P-4: Auto shut off.

Use  $\uparrow\downarrow$  arrows to select the time the press should be left unused before it switches off automatically.



06. Once you have selected all the parameters, press "set" to validate them and start using the press.



**BRILDOR**  
everything for personalisation