


Step 1. ASSEMBLING THE STRUCTURE


- 1.- Remove the tubes from the bags.
- 2.- Look for pairs of tubes marked with the same number.
- 3.- Insert one tube inside the other until you hear a clicking sound.
- 4.- Once the tubes are assembled, use the 3-way PVC connectors to build the structure. Follow the order as shown in the picture.
- 5.- Use a rubber mallet to ensure that the tubes are fully inserted into the connector. This step is very important to make sure that the size of the frame is adapted to the cover.

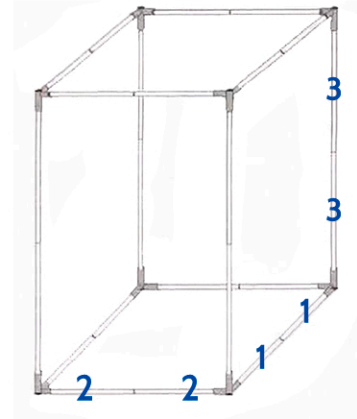

Step 2. ASSEMBLING THE COVER


- 1.- Place the structure on a wide, flat surface. Look for the bottom of the cover and place it on the structure as shown in the picture.

The lower corners from both the structure and the cover must be aligned.

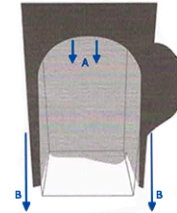

- 2.- Carefully turn the structure, so that the top of the cover is touching the flat surface.

Press and adapt the corners of the cover to the structure. Turn the enclosure again so that the bottom is touching the flat surface, as shown in picture n°2

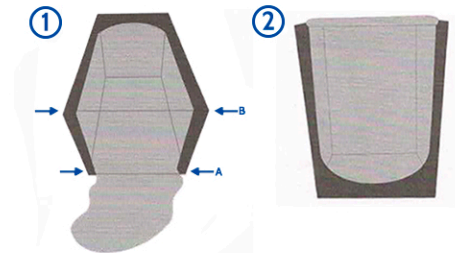

3. Adjust the flap towards the front of the enclosure as shown in the picture.

