


Clock Mechanism

Assembly Instructions



Clock mechanism assembly instructions

1. Fully insert the clock mechanism shaft through the hole of the previously customised panel.
2. Place the washer on the shaft and let it slide all the way down.
3. Place the hexagonal nut on the shaft and tighten it.
4. Place the hour hand on the shaft and set it to 12:00. Press gently.
5. Place the minute hand on the shaft and set it to 12:00. Press gently.
6. If the mechanism includes a second hand, place the round nut on the shaft and tighten it.
7. Then, place that last hand on the shaft and set it to 12:00. Press gently.
8. If the mechanism doesn't include a second hand, adjust the acorn nut.

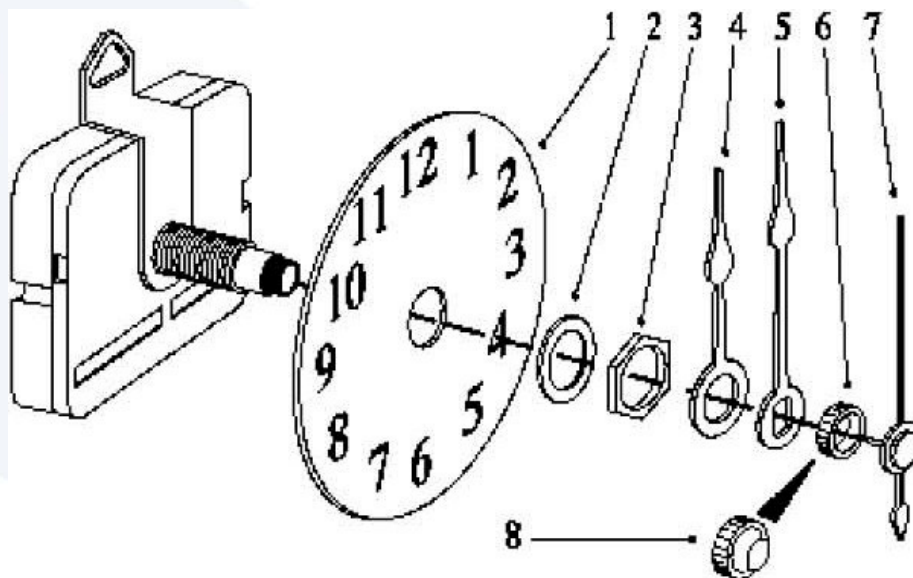

BRILDOR
everything for personalisation